

How to fit your

# Intu Micro Beadfit


### How to fit your

# Intu Micro Beadfit


#### You will need:

- INTU Fitting Tool
- INTU Bottom Corner Brackets
- INTU Retention Clips


INTU Top Corner Brackets
 Note: The above should be supplied with your blind.

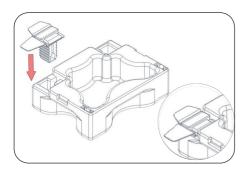


1. Place the top corner bracket into the slot on the fitting tool.

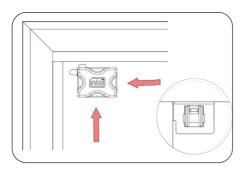


2. Position bracket behind the rubber bead and carefully push until the metal legs are behind the rubber bead. Check bracket is square to the sides of the bead and is secure. Repeat for other side.

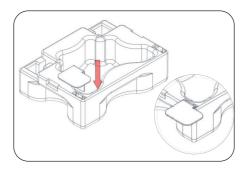

3. Place the bottom corner bracket into the slot on the fitting tool.

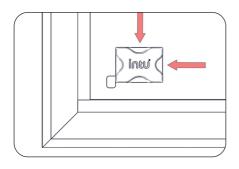


4. Position bracket behind the rubber bead and carefully push until the metal legs are behind the rubber bead.
Check bracket is parallel to bead and is secure. Repeat for other side.

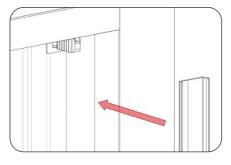


5. Place the flat side of the side extrusion against the glass with the notch to the bottom.

### How to fit your


## Intu Micro Beadfit

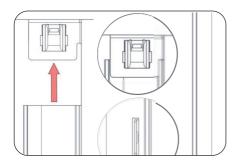


6. Slide the side extrusion up until its slots into the top corner fixing bracket. The side extrusion should rest under the bracket. Push the slot at the base of the extrusion over the bottom corner bracket. Repeat for both sides.

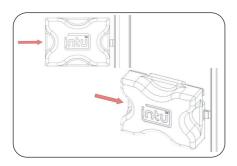


7. At the appropriate position(s) on each side profile, fit retention clips (long side profiles only). Press into position using the fiting tool.

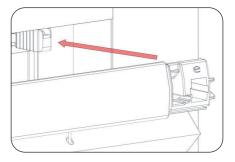


8. Align headrail endcaps with top corner fixing brackets and push fully home.

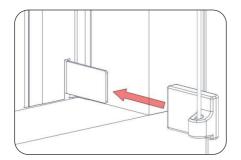



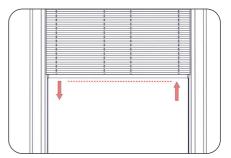

10. To align the bottom rail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords.

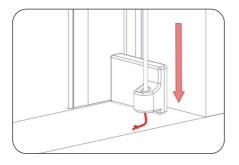

11. If your blind requires further tension, pull the cord through the hole in the bottom button until you feel the blind has sufficient tension and tue a fresh knot.





Hallis Hudson Group Limited, Unit C34, Red Scar Business Park, Longridge Road, Preston, Lancashire, PR2 5NN