

How to measure your Intu Micro Beadfit



Note: Measure the glass size only


Measure the visible glass width at 3 different points as shown. Use the smallest measurement as the blind width.

Measure the drop.

Check the rubber bead type and specify on order.


Specify the side profile type.

Fill out the order form.

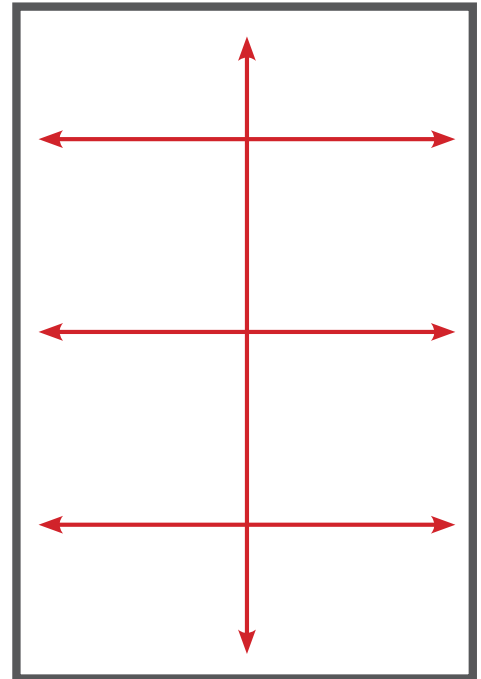

Tensioned Bead Fit/Guided Bead Fit			
Max Width	1000mm	Min Width	250mm
Max Drop	2000mm	Min Drop	250mm
Max Area	2m ²	Max Bead Depth	N/A

Side Profile

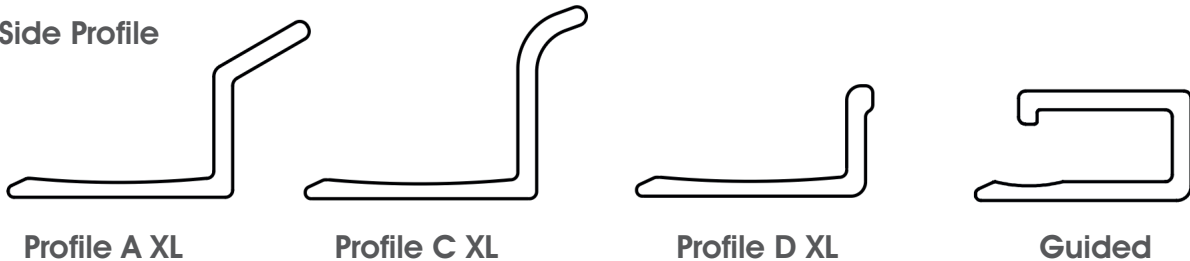

All profiles are shown at 2x actual size

