

# Hybrid Cassette

## Fitting Instructions



Made to Measure Window Blinds

# Hybrid Cassette

Fitting Instructions

# Hybrid Cassette

## Fitting Instructions



### **INSTALLATION OF CASSETTE**

Your Cassette Blind will be supplied with either top fix or face fix brackets.

#### **TOP FIXING**

The Top fix spring brackets should be placed approx 2" (50mm) in from each end and any other brackets should be spaced evenly between them.

Position your bracket from the centre of the fixing slot a minimum distance of 1.75" (45mm) from the back of any obstruction and with the lip to the back, then mark the position of the holes/slots (we recommend two holes) and drill the required holes. Fix all of the brackets.

#### **FACE \ FIXING**

Face fix brackets should be placed approx 2" (50mm) in from each end and any other brackets spaced evenly between them. Position the back of your bracket against the wall to the height of the drop then mark the position of the holes/slots (we recommend two holes) and drill the required holes. Fix all of the brackets.

# Hybrid Cassette

## Fitting Instructions



### FITTING THE BLIND

#### FITTING



Place your cassette blinds front lip into the front hook of the bracket and push upward into the bracket until there is a firm click.

#### REMOVING



To remove the blind, push the lip of the bracket at the back of the cassette upwards using the head of a screwdriver. This will free the back of the cassette. Carefully remove to avoid damage to the blind.

Dirty marks on the fabric may be removed by wiping with a lightly moistened cloth using a mild detergent in a warm water mixture. The fabric should not be soaked, as this will cause shrinkage. Never scrub or rub the fabric with any force.

## WARNING!

Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings. They can also wrap cords around their necks.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Move beds, cots and furniture away from window covering cords.

You can take a number of practical and simple precautions to significantly reduce the risk of accidents. And many of our products are inherently child-safe. For example, with Vertical Blinds, you can request an alternative method of operation, for example Crank or Wand operation. Otherwise, we strongly recommend you fix a Cleat which is included with your blind.

### How to fix the Cord/Chain Tidy:

1. Place operating cords/chain neatly around the centre of the cord tidy.
2. Screw tightly against the wall in the window recess.
3. Fit screw cover in place.
4. Clip both sides of cord tidy together.

