

Senses Roller

Inside Recess Top Fix



Fitting Instructions

Step 1: Slide a fixing bracket, flat face up, onto the tool. Ensure the bracket is slid all the way on, until the top face hits the ledge on the tool, and the centres of all the holes on the bracket are aligned with the hole on the tool.

Step 2: Take the tool and bracket to the window recess. Butt the flat vertical face of the tool against the outer face, and hold the bracket against the top face of the recess approximately 100mm in from either side of the recess.



Step 3: Keeping the tool in place, either drill a pilot hole through the centre of the holes on the bracket, or – if fitting to a suitable substrate – directly drive a screw up into the recess until tight. Ensure the tool stays flat and square against the recess while doing this. Once the screw is tight, the tool can be pulled out of the bracket. NOTE: The use of wall plugs is recommended where appropriate.

Step 4: Repeat steps 1 – 3 at the opposite side of the recess. Additional brackets can be evenly spaced and used as centre supports by following these recommendations:

- Widths up to 800mm require 2 brackets.
- Widths up to 1.5m require 3 brackets.
- Widths up to 2m require 4 brackets.

Step 5: Enter fascia into top brackets as shown and snap firmly into place. (Check fascia is flush with recess edge.)

Step 6: The end caps can move outwards 10mm at each side, which can take up any small gaps between the headrail and the side of the recess that may appear due to mis-measurement.

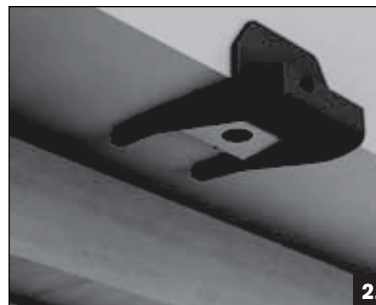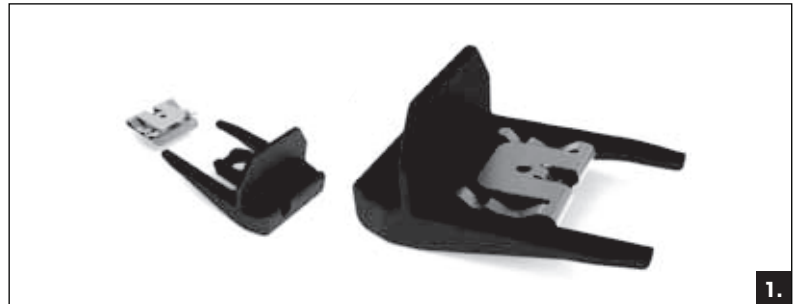

To Remove Blind

Step 1: To remove blind, fully raise and grip both the fabric roll and the fascia with each hand. Rotate the entire blind downward slightly in the direction shown to open the top fix brackets.

Step 1: While holding the blind in this position, pull it down and away from the brackets.

