

# Senses Roller

## Outside Recess Face Fix




### Fitting Instructions

**Step 1:** Take the tool to the window and butt the square edges into the window recess, so that the arrows point horizontally away from the window.

**Step 2:** Pick the required overlap: 22mm (marked 'recess fit'), 50mm or 765mm. Keeping the tool in place, drill into the fitting surface using a 3mm bit through 2 of the 4 grouped holes. Where centre support is required, position tool in centre of window and drill required holes. It is recommended to use the top and bottom holes where possible.

**Step 3:** Remove the tool, revealing the two holes. Take the bracket to the holes and line them up within the slots on the bracket base. Insert screws into the holes and tighten. Using the top and bottom slots allows for sideways adjustment of the bracket before completely tightening. Repeat for additional brackets and centre supports. Please note that the use of wall plugs is recommended where appropriate.

**Step 4:** When all brackets have been fitted insert blind by lining up fascia end caps with slots on fixing brackets. Adjustment of fascia end caps can be used to aid this process. When both sides have been located ensure blind is pushed fully home until locks on both the fixing brackets and centre support have been snapped in to place.

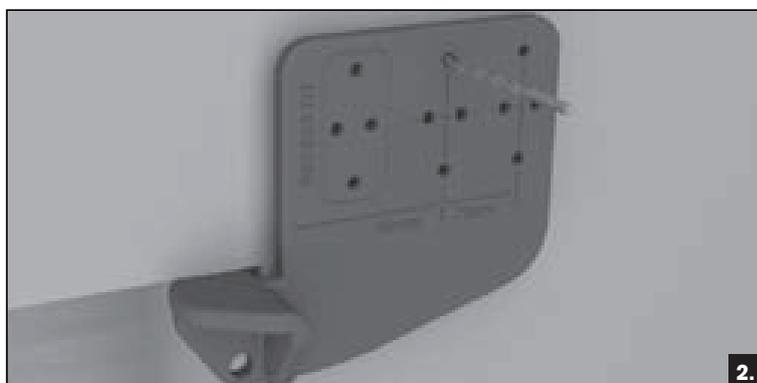

#### To Remove Blind

Using flat blade screwdriver, release locking clip as shown and pull fascia away from bracket.



**OR**

Using flat blade screwdriver, release locking clip by inserting screwdriver between bracket and end cap.

