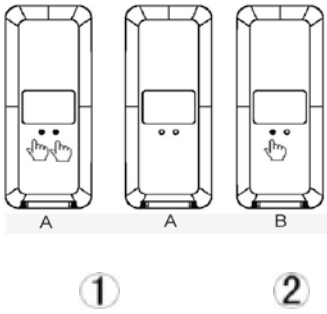
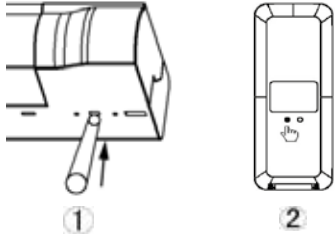


|                       |   |  |  |                       |
|-----------------------|---|--|--|-----------------------|
| <b>Technical Data</b> | <p>Battery Specification: Li-ion Battery, 3.7V.</p> <p>Please charge the battery when the motor alarm beeps or motor fails to turn the blind.</p> |  |  | <p>Remote Control</p> |
|-----------------------|---|--|--|-----------------------|

| Operation                                | Step   | Operation  | Result  | Illustration |
|--|--|--|---|--------------|
| <b>Pairing remote control with motor</b> | <b>PLEASE SKIP STEP ONE AND GO TO THE STEP TWO IF THE MANUFACTURER HAS PROGRAMMED A REMOTE WITH A MOTOR BEFORE DELIVERY.</b> |  |   |              |
|  | 1  | Press and hold down the <b>SETTING</b> button on the motor.                  | Release this button when the LED flashes red.                                       |              |
| 2  | Press the <b>CONFIRM</b> button on the back of the remote control  | When the LED flashes green the remote will now be paired with the motor      |   |              |
| <b>Changing motor rotation direction</b> | 1  | Press  button and the  button at the same time to change the motor direction | Release both buttons when the Green LED flashes. The direction will now be reversed |              |
| <b>Set up tilt range</b>                 | <b>THE WHOLE LIMIT SETTING MUST BE FINISHED AT ONE TIME</b>  |  |   |              |
|  | 1  | Press and hold <b>LIMIT</b> button on the back of the remote                 | Release the button when the Red LED flashes on the motor                            |              |
|  | 2  | Motor turns in a clockwise direction and stops when you reach the end        | Red LED flashes   |              |
| 3  | Motor turns in a anticlockwise direction and stops when it reaches the end   | Red LED flashes. Now the limit settings have been done for both ways         |   |              |

| Operation  | Step  | Operation  | Result  | Illustration  |
|--|---|--|---|---|
| <b>Program a second remote with an already programmed remote</b> | 1   | Press and hold the <b>LIMIT</b> button on the first programmed remote A then press the <b>CONFIRM</b> button | Release both buttons when the Red LED flashes                     |  |
|  | 2   | Now press the <b>CONFIRM</b> button on remote B  | Green LED flashes, now all programmed remotes have been detected  |   |
| <b>Delete all remotes</b>  | 1   | Press <b>SETTING</b> button on the motor 3 times   | Green LED flashes, now all programmed remotes have been deleted   |  |
| <b>Delete one remote from the motor</b>                          | 2   | Press CONFIRM button 2 times on the back of the remote   | Green LED flashes, now the remote has been deleted from the motor |   |
| <b>Charging</b>  | The motor works with Li-ion battery, please charge it when the motor alarms or work are faltering. Please charge the motor using a professional charger DC5V. Charging time: Charge for 6 hours or when the indicator turns Green. <b>Please remove the charger once it's full.</b>                 |  |   |   |
| <b>FAQ</b>   | <b>If nothing works then please check the following:</b> <ul style="list-style-type: none"> <li>- Make sure you change the motor battery first.</li> <li>- If the motor continues to turn continuously, the user hasn't setup the limit successfully. You will need to re-set the limit.</li> </ul> |  |   |   |