



Silent Gliss 5100







# EN Operation instructions

Please select channel for multi-channel transmitter before operation 0.5s is needed for up/down converting, max single running time is 4 min.

## 1. Programming



Press the PROG button 1s.



Red light flash slowly, please do the next step within 10s.



Press UP of transmitter.



Blue light flash 3 times. Programmed.

## 2. Changing direction

In the case of the motor goes in wrong direction



Press STOP on programmed transmitter and hold for 5s.



Red light flash slowly, please do the next step within 10s.



Release and press STOP again.



Blue light flash 3 times. Changed.

#### 4. New transmitter adding



Press STOP on programmed transmitter and hold for 5s.



Red light flash slowly, please do the next step within 10s.



Press UP of new transmitter.



Blue light flash 3 times. Added.

#### 5. Single code deleting



Press STOP on programmed transmitter and hold for 5s.



Red light flash slowly, please do the next step within 10s.



Press DOWN.



Blue light flash 3 times. Deleted.

#### 6. All code deleting

Journey will be deleted and the running direction will be the factory defaulted mode, keeping the touch function.

Method 1



Press STOP on programmed transmitter and hold for 5s.



Red light flash slowly, please do the next step within 10s.



Press PROG button on back side and hold 7s.



Indicator die out. Deleted.

Method 2



Press the PROG button on motor and hold for 3s.



Red light flash.



Press the PROG button again.



Blue light indicate 1s. Deleted.