 


CORDLESS CELLULAR BLIND

Fitting Instructions


Please keep for future reference

Tools required

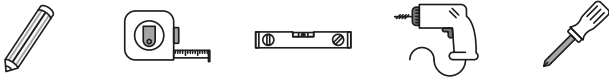

Please read these instructions carefully and check the contents of the pack before attempting to assemble and fit this product.

Pack Content (Components may slightly vary from those shown)

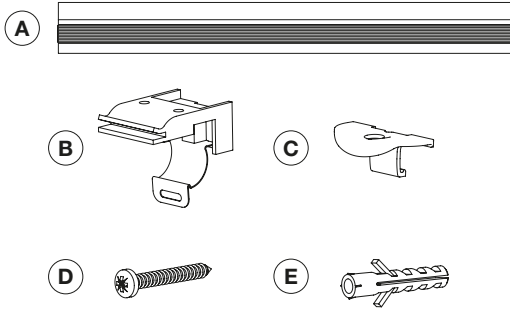

Parts		Width		
		60cm - 90cm	100cm - 140cm	150cm - 180cm
A	Blind	1	1	1
B	Bracket	2	3	4
C	Bottom rail clip	1	1	2
D	Screw	4	6	8
E	Wall Plug	4	6	8

Note: Components may vary slightly to those shown.

WARNING: Cannot be cut to size

Should any component be missing, please call the Customer Care Department on **0330 005 2233**.

Safety Recommendation

Always use a Step Ladder when working at heights. DO NOT over reach. Always move the Step Ladder so that you are in a safe working position.

DO NOT hold or lean on the blind to support your weight. We recommend you use two people for installation of larger blinds.

Take care when using power tools, use of a Residual Current Device (RCD) is recommended.

Always use eye protection when drilling. Beware of hidden pipe runs and cables.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled product.

PLEASE KEEP OUT OF THE REACH OF YOUNG CHILDREN. SMALL PARTS - CHOKING HAZARD

PLEASE KEEP THESE INSTRUCTIONS AND THE BATCH CODE ON THE PACKAGING FOR FUTURE REFERENCE IN CASE OF ANY QUERIES

Installing the blind



Note: Please check to ensure the enclosed fixings and fixtures are suitable for your wall type. Consult your nearest D.I.Y store for advice if necessary.

1. The blind can be wall or ceiling (top fixed) either inside or outside the recess. Blinds wider than 100cm are supplied with additional brackets. Brackets cannot be fixed to a side wall.
2. To wall fix (fig.A), the brackets should be fixed 8-10cm from each end of the headrail. If there are additional brackets (over 100cm), they should be evenly spaced over the remainder of the headrail.




Use a spirit level to ensure that the brackets are level.

3. To ceiling fix (fig.B), the brackets should be fixed 8-10cm from each end of the headrail. If there are additional brackets (over 100cm), they should be evenly spaced over the remainder of the headrail. Please ensure that the brackets are at the same distance from the back wall.

Note: Ensure that the bracket does not sit directly over the mechanism within the blind's headrail.

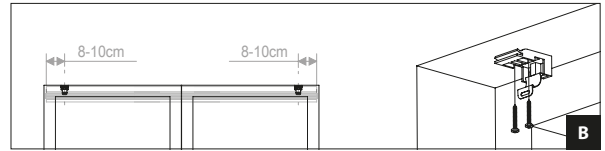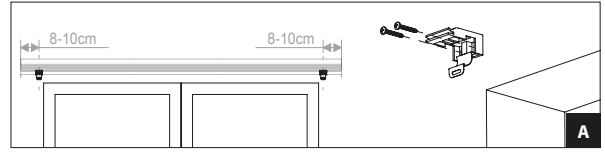

4. Once the brackets have been fitted, lift the headrail into position so that the front edge of each bracket is under the inner front edge of the head rail. (fig.C)
5. Push the back of the headrail upwards until the flexible tab at the bottom of each bracket snaps onto the back of the head rail. (fig.D)
6. Check carefully to ensure that each bracket is properly secured.
7. Place the clip onto the centre of the bottom rail (fig.E). For larger blinds, place 2 evenly spaced clips onto the bottom rail.

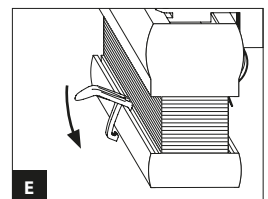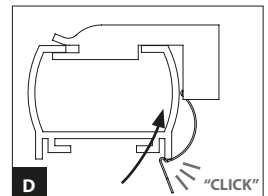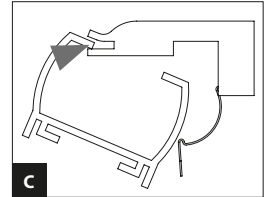

Operating the blind

1. To lower the blind
Hold the bottom clip(s) and slowly pull straight down. (fig.F)
2. To raise the blind
Push up in the centre of the bottom rail to reach the desired height. (fig.G)

