



Eve Motion Roller Blind Programming Instructions

(Via Pull Chain)

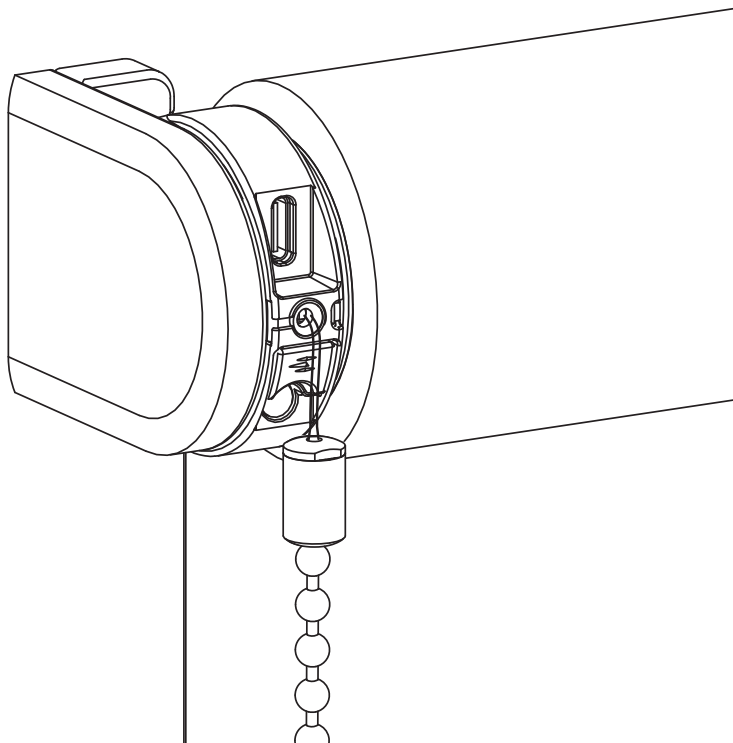


Buttons and functions

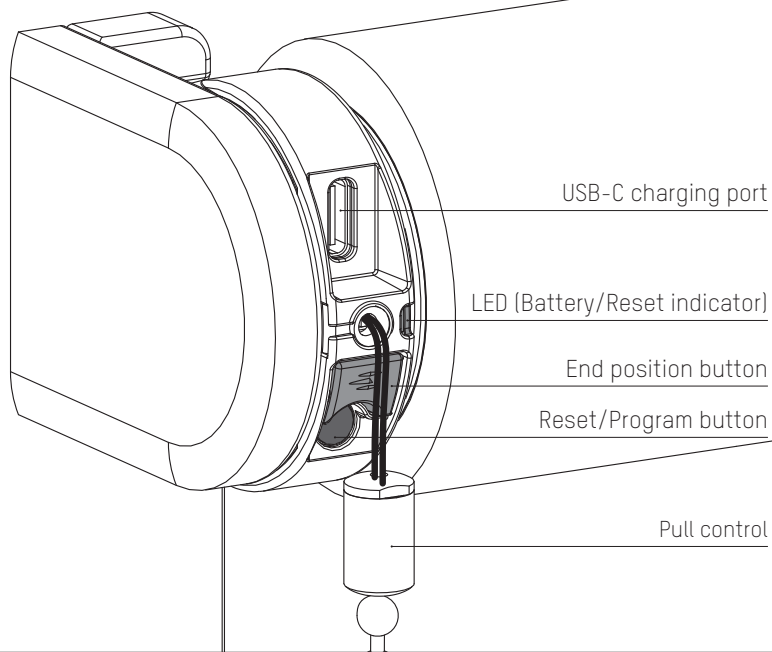


1 Install the blind

Follow the steps in the installation instructions to install the blind.

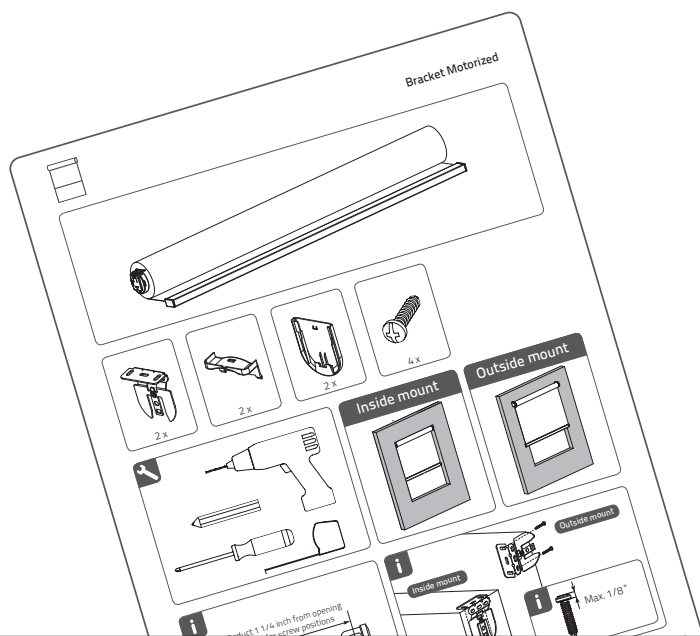

2 Activate the blind

To activate the blind, connect it to a standard USB-C 5V power supply via a USB-C cable. This can be your smartphones power adapter, for example.

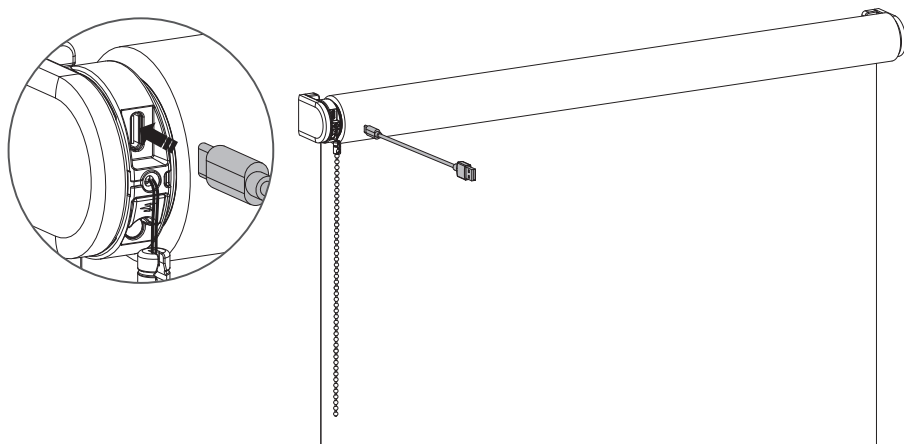

3 Add Eve MotionBlinds to your platform

Eve Motionblinds motors support Matter and Thread, making them work with all major platforms. To setup and control Eve Motionblinds, you need a border router with Thread and Matter from the platform you choose and your devices must meet specific requirements.




4 Setup the blind

Scan the Matter Setup Code through the app from the smart home platform of your choice to add Eve Motionblinds to the platform.

Eve MotionBlinds needs end positions to work properly. End positions can be programmed in two ways. In the Eve app or by the end position programming button on your blind. (Step 5)


After scanning you can hide your Matter Setup Code.

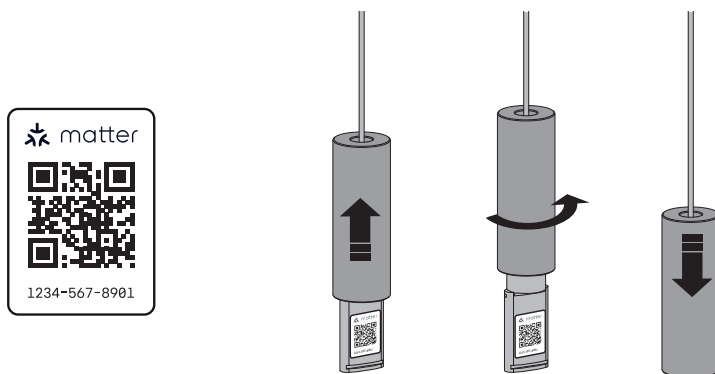

5 Set end positions

Beside setting the end positions by the app you are able to set the end positions by pressing the button on the motor. Pull and hold the chain until the blind has reached the bottom position. If the blind moves in the opposite direction, release the chain and pull and hold again.


Adjust until the desired bottom position has been reached.

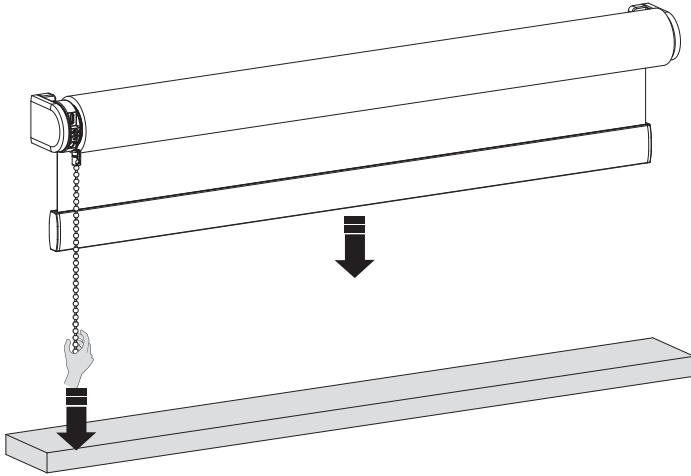

6

6 Save your bottom position


When your blind is positioned at your bottom position hold the button until the blind moves up and down to save your bottom position.

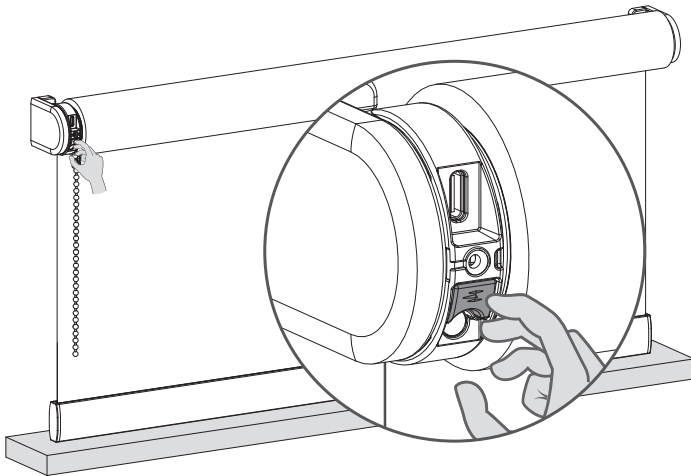

7 Move your blind to the top position


Pull and hold the chain until the blind has reached the top position. If the blind moves in the opposite direction, release the chain and pull and hold again.

Adjust until the desired top position has been reached.

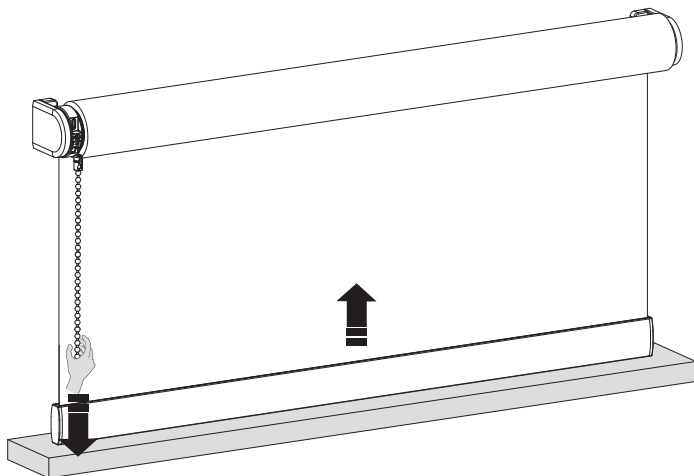


8 Save your top position

When your blind is positioned at your top position hold the button until the blind moves up and down to save your top position.

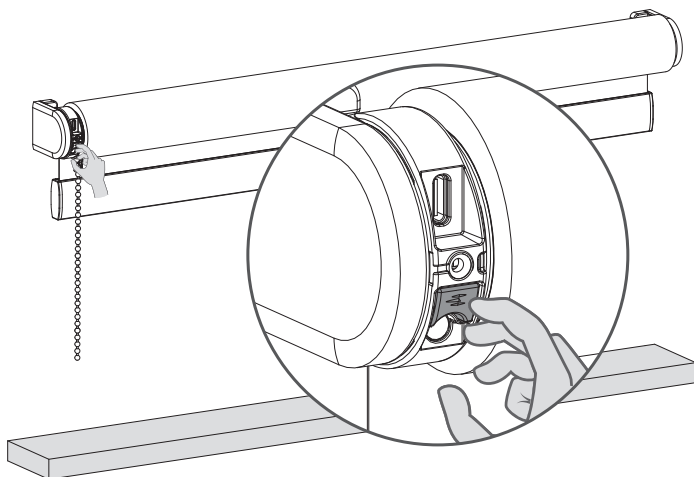

9 Adjust your end positions


To adjust one of your end positions you need to place your blind at the end position you want to adjust. Pull and wait until the blind has reached the end position you want to adjust.

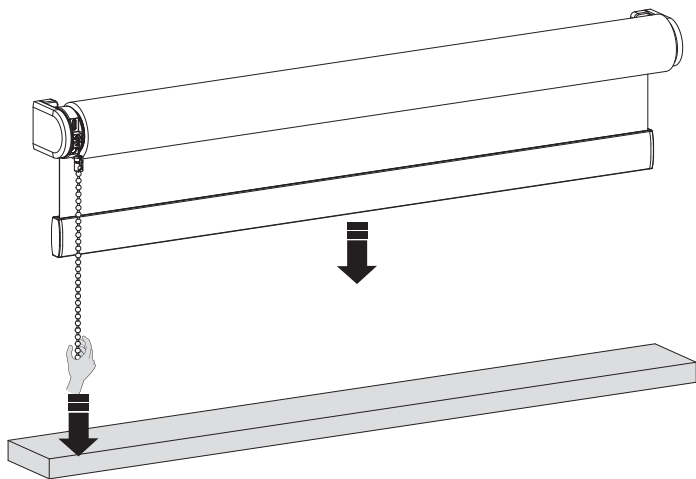

8

10 Remove your (bottom/top) position


Hold the end position program button for 3 seconds to remove your (bottom/top) position. The blind will step up and down once to confirm that your end position has been removed. You are now able to set a new (bottom/top) position.

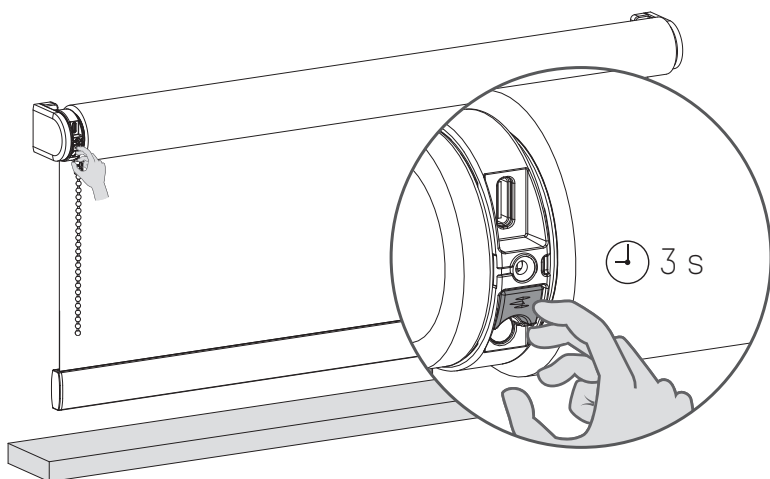

11 Move your blind to the new (bottom) position


Pull and hold the chain until the blind has reached the bottom position. If the blind moves in the opposite direction, release the chain and pull and hold again.

Adjust until the desired bottom position has been reached.

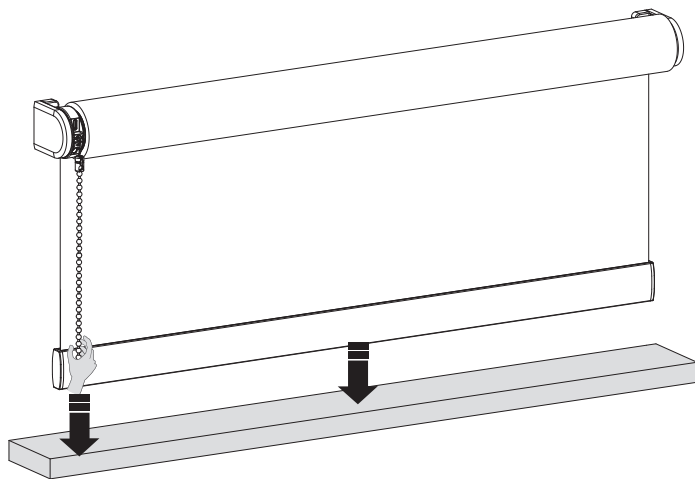


12 Save your (bottom) position

When your blind is positioned at your bottom position hold the button until the blind moves up and down to save your bottom position.

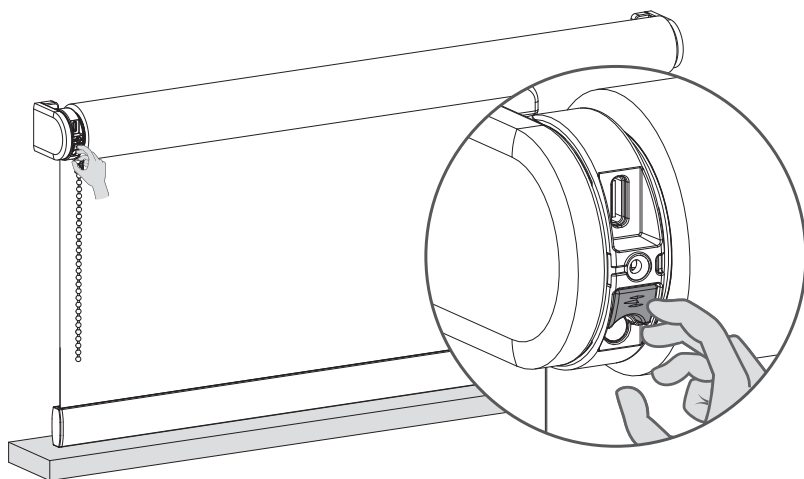

13 Save the favorite position


When there is no favorite position programmed you need to position your blind at your favorite position. When the blind is at your favorite position hold the pull until the blind steps up and down once. (Approximately 7 seconds)

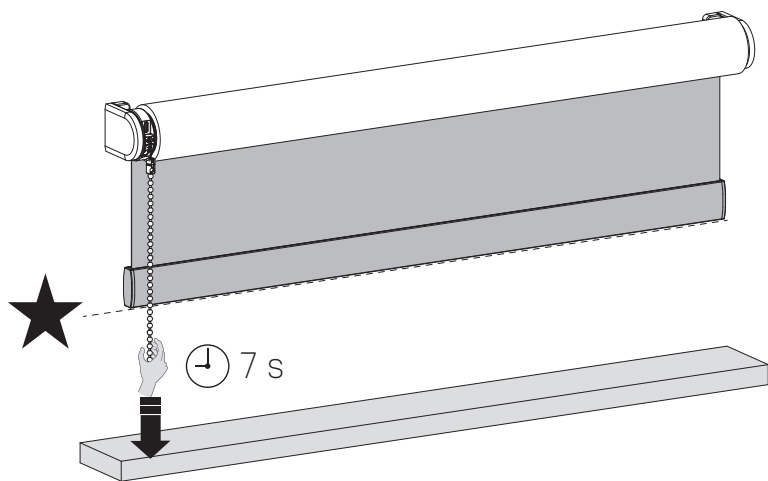

10


14 Control your blind to favorite position

When your blind is not positioned at the favorite position hold the pull for 5 seconds and your blind will move to its favorite position.

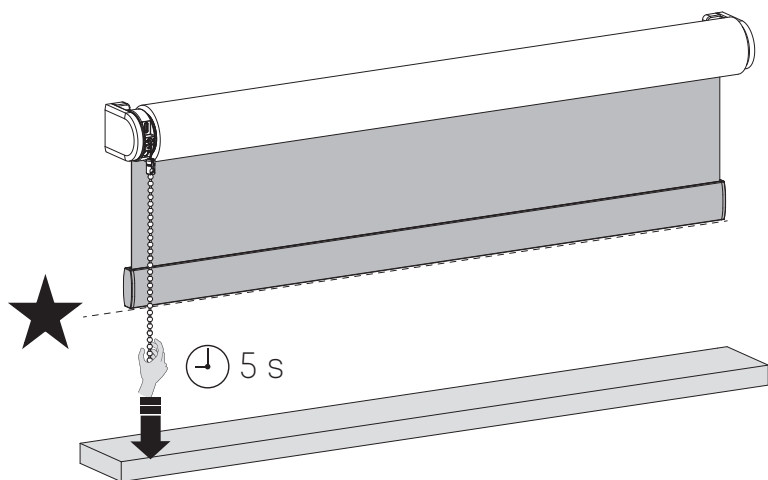



15 Save a new favorite position

To remove your previous favorite position you need to place your blind at your current favorite position. (Step 10) Then Hold the pull until the blind steps up and down once. (Approximately 7 seconds) Your favorite position is now removed. Follow step 9 to set your new favorite position.

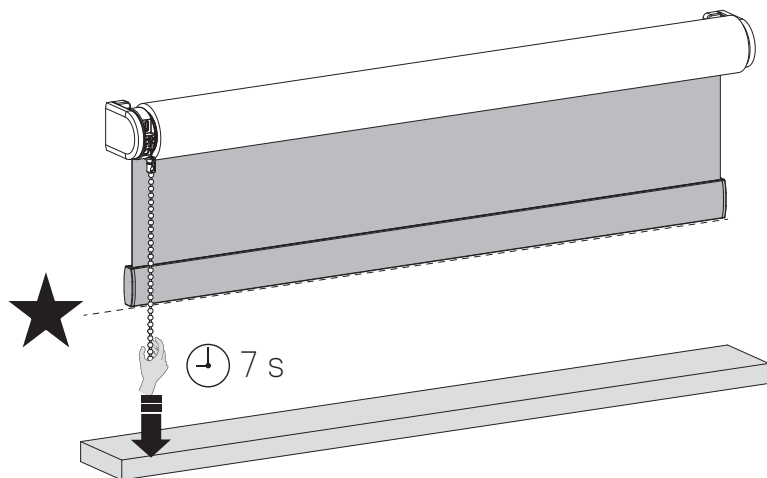


i Change direction of rotation

If the position of the blind in the app is opposite to your blind, change the direction of rotation by pressing the End Position button twice within one second.

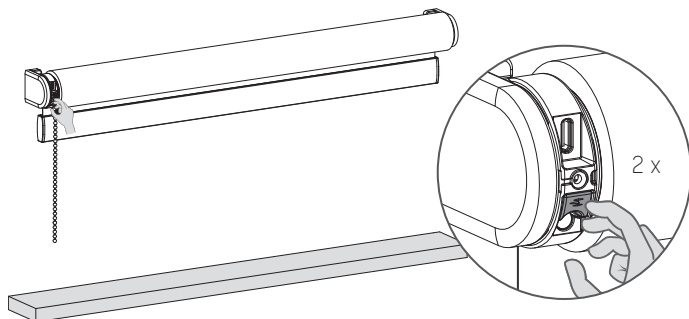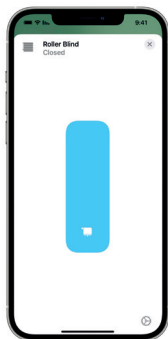


i Recharge the blind


To charge the blind, connect it to a standard USB-C 5V power supply via a USB-C cable. This can be your smartphones power adapter, for example. Charge at least once a year.

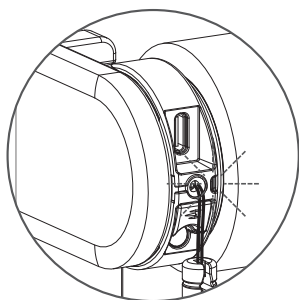

LED light flashes
red during operation;
Charge the battery

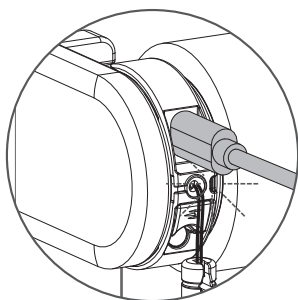

LED light flashes
green; battery is
charging

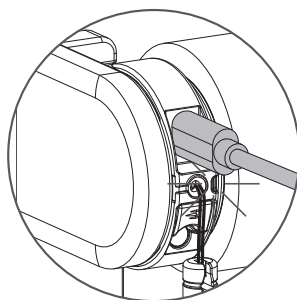

LED light constantly
green; battery is fully
charged

Distributed By:



HALLIS HUDSON
Committed to excellence

Hallis Hudson, Unit C34, Red Scar Business Park,
Longridge Road, Preston, PR2 5NN
Email: Sales@hallishudson.com