


Eve Motion Roller Blind Programming Instructions


(Via Remote Control)

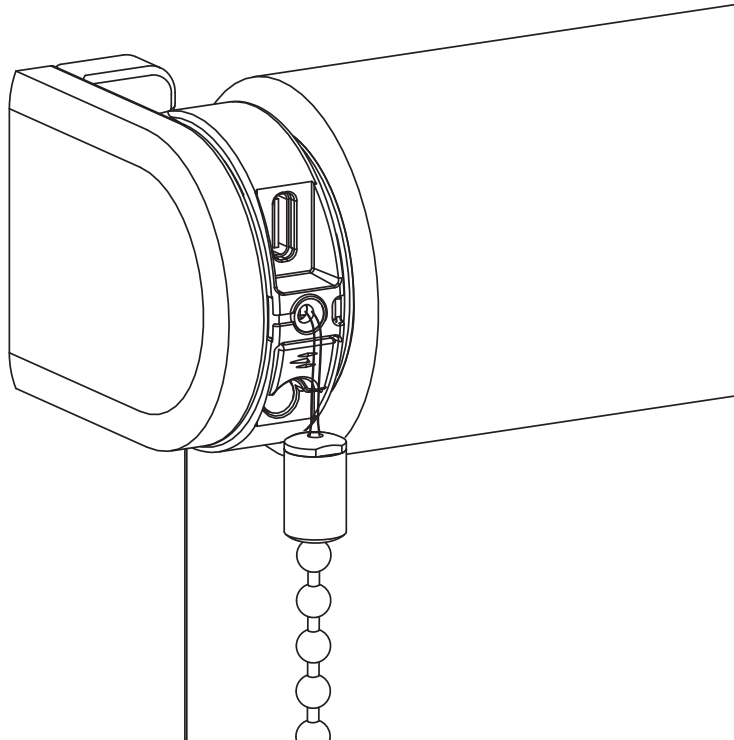

1 Pair a remote control

Any MotionBlinds remote can be connected to your blind.

- 1 Select a channel on the remote and press the program button on the motor to activate program mode. The blind will start stepping up and down.

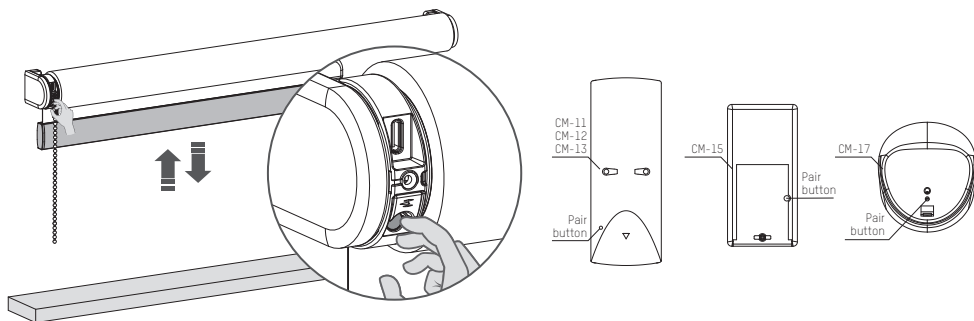


- 2 Press the pair button on the back of the remote control to pair the blind with the selected channel. The blind will shortly stop stepping, indicating that the remote has been paired to the blind.
- 3 Shortly press the program button to deactivate program mode. The blind stops stepping and can be operated.

18

2 Check rotational direction



WARNING: risk of damage. Stop the blind before reaching the end positions.

- 1 Shortly press the down button to check if the blind unrolls the right way. If the blind moves up, the rotational direction must be changed.
- 2 Simultaneously press the up and down button to change the rotational direction.

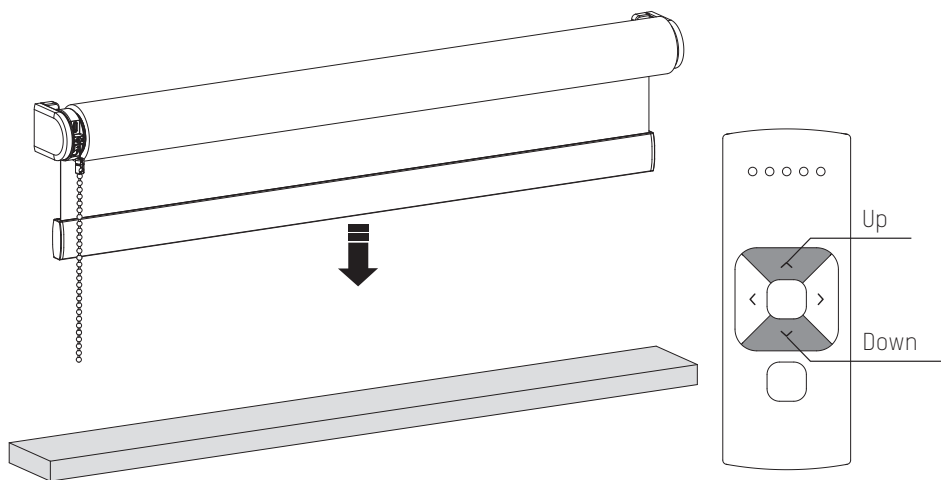



3 Set bottom position

Press and hold the down button until the blind reaches the desired bottom position. **WARNING:** risk of damage. Slowly approach the bottom position.

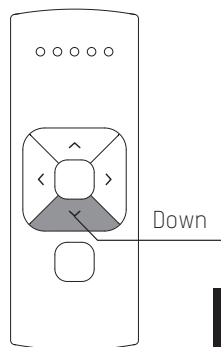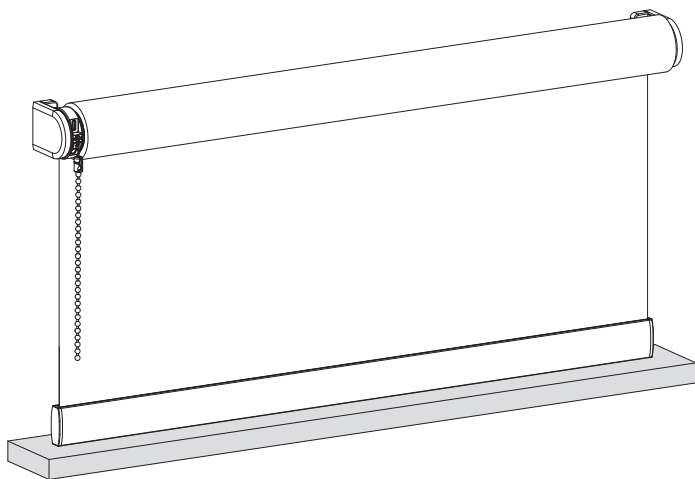


4 Save bottom position

Simultaneously hold the centre and the up button until the blind stops stepping and starts stepping again. The bottom position has been saved.

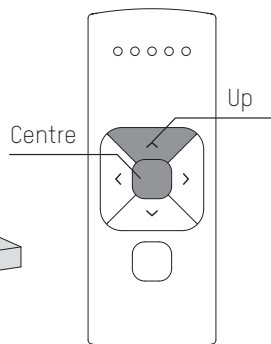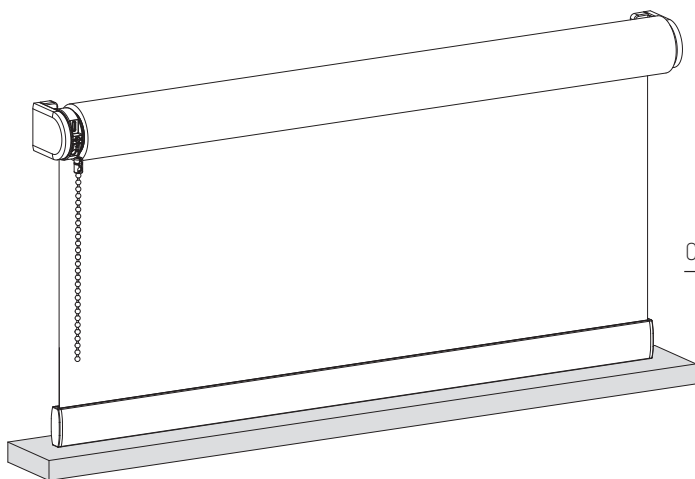


5 Set top position

Press and hold the up button until the blind reaches the desired top position.
WARNING: risk of damage. Slowly approach the top position.

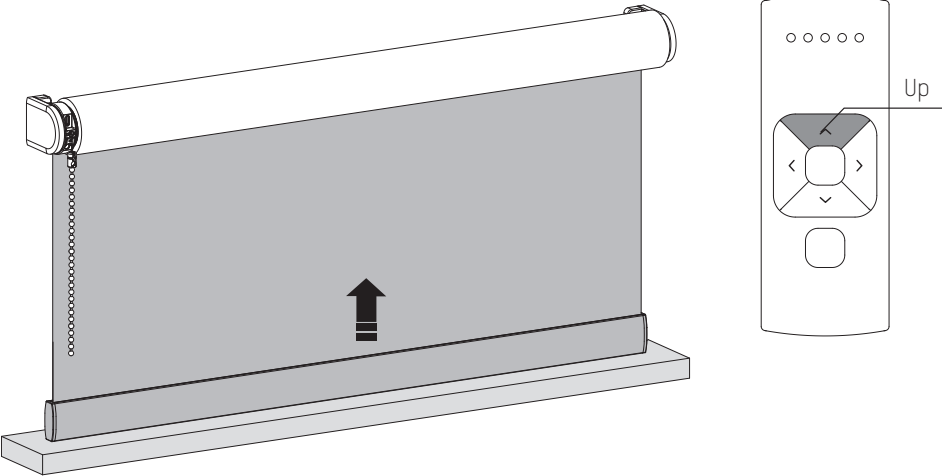


6 Save top position

Simultaneously hold the centre and the down button until the blind stops stepping and starts stepping again. The top position has been saved.

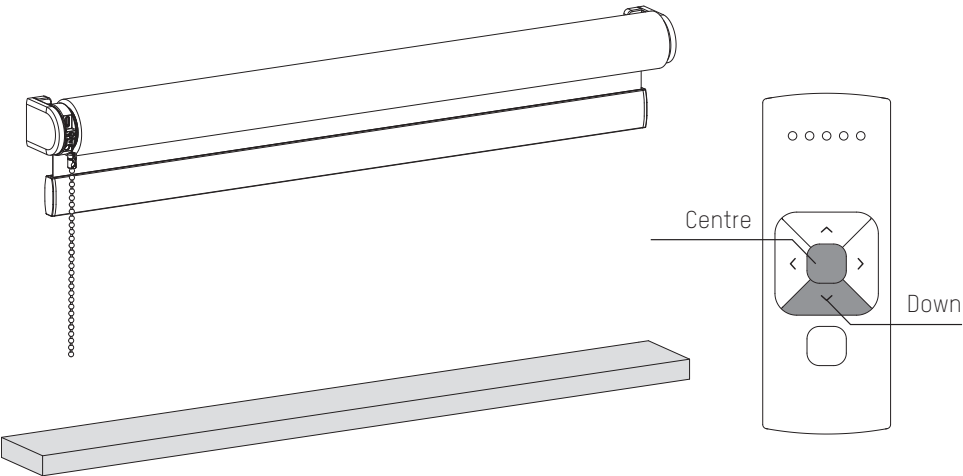


7 Set favorite position (optional)

- 1 Move the blind to a desired favourite position.
- 2 Hold the centre button to save this Favourite position. The blind shortly stops stepping indicating the favourite position has been saved.

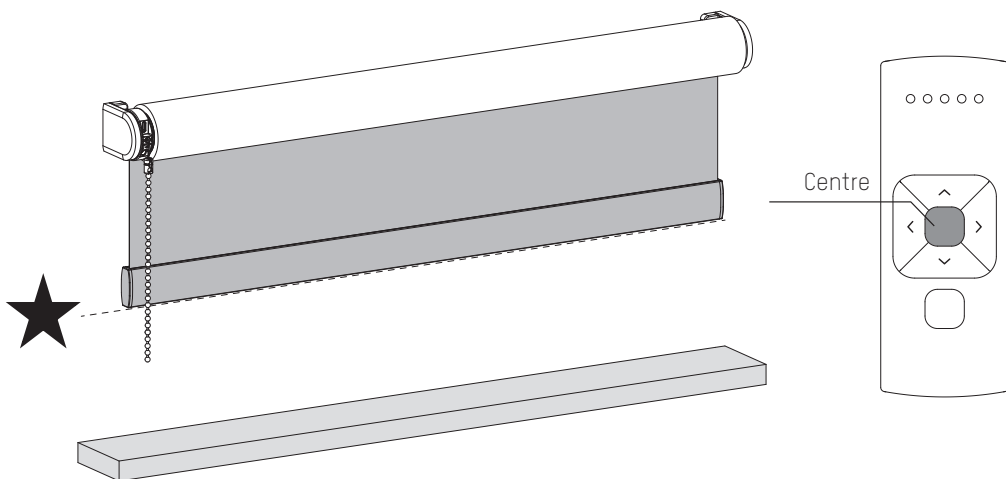

8 Deactivate program mode

Shortly press the program button to deactivate program mode. The blind stops stepping and can be operated.

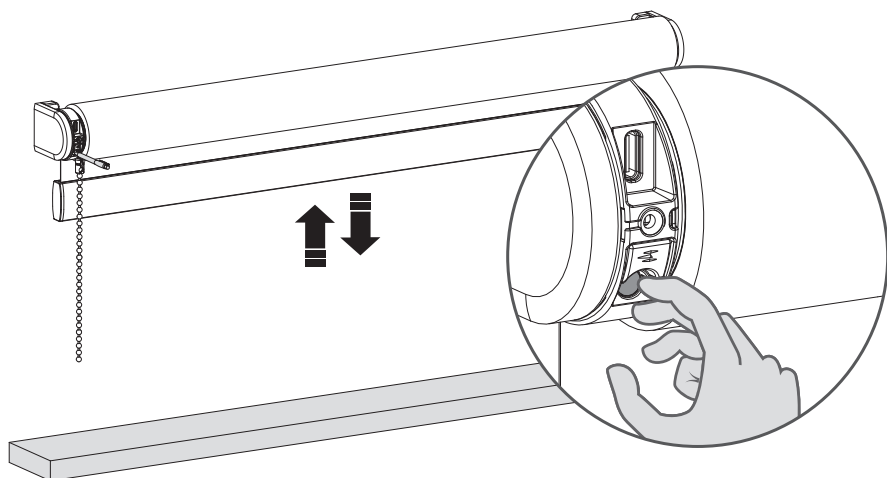

Distributed By:



HALLIS HUDSON
Committed to excellence

Hallis Hudson, Unit C34, Red Scar Business Park,
Longridge Road, Preston, PR2 5NN
Email: Sales@hallishudson.com