


# Complete Pole

## Fitting Instructions



### Tools you will need...

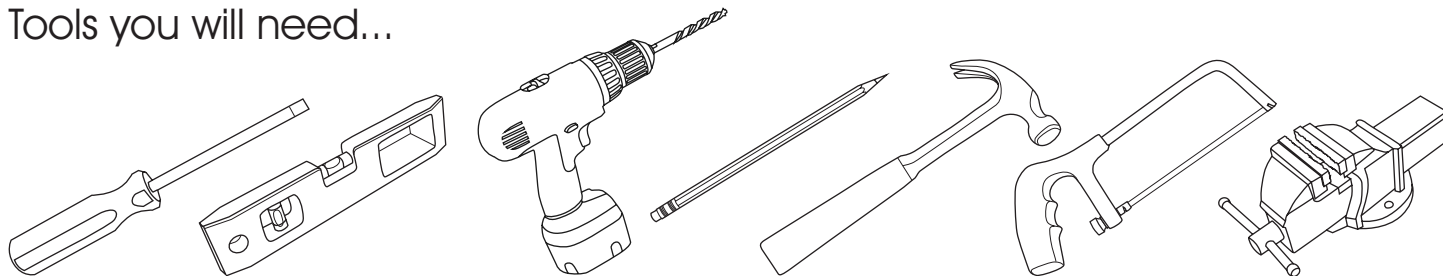

Flathead Screwdriver

Spirit Level

Drill

Pencil

Hammer\*

Hacksaw\*

Vice\*

\*These will only be needed if you intend to shorten the rod.

If your walls are not solid (i.e. brick or breeze block), you may need to purchase special fixings and should consult your local hardware shop. Please note all components are oiled to protect them during transit, wipe them dry with a soft cloth prior to assembly.

## how to..

### fit your curtain pole...

**Step 1:** Before assembly, loosen the grub screws on all brackets to prevent any damage to the surface of the pole when fitting.

**Step 2:** As a guideline we recommend that the brackets are positioned 10cm up and 10 to 15cm out from the window frame (you may use a spirit level for accuracy).

**Step 3:** Ensure that the assembly is level and position bracket on the wall where the bracket will be fitted. Use a pencil to mark the exact position of the screw holes that will fix the brackets to the wall.

**Step 4:** Drill into the wall at the marked positions using an appropriate drill bit for the type of wall. Insert wall plugs, ensuring they are flush with the wall and Finally screw the bracket onto the wall.

**Step 5:** Check that the pole fits the window. If needed, Cut the rod to size by marking off the required length using a piece of masking tape, or by scoring the surface lightly. Clamp the rod inside a vice, first wrapping it in a soft cloth for protection, and cut neatly using a hacksaw. For poles that consist of 2 rods, both rods should be shortened by the same amount.

**Step 6:** If joining two poles together, join the rods using one of the brackets, and tighten the grub screws with the allen key, ensuring each section is firmly anchored by the screw.

**Step 7:** Fit the required number of rings onto the curtain pole leaving 2 rings to be attached on the finials, one on each of the finials, before positioning the pole on the brackets. Tighten the grub screws on the brackets to secure the pole.

**Step 8:** To ensure that the last ring on each end of the pole is on the outside of the bracket, place a ring on each of the finials, before attaching them to the pole using the brackets.

### Care

Avoid excessive dampness, which could cause rust spots to develop.

Wax all components occasionally with a good quality beeswax or wax furniture polish as this will help protect your curtains from any powder residue which may have built up over time due to the nature of this product.



**HALLIS HUDSON**  
Committed to excellence

**Hallis Hudson Group Ltd,**  
Unit C34, Red Scar Business Park, Longridge Road, Preston, Lancashire, PR2 5NN  
Sales Tel: 01772 202 202 | Sales Fax: 01772 515 515  
e-mail: sales@hallishudson.com | www.halliswebshop.com

**www.hallishudson.com**