

Intu® Duette® Shades

Screwfit Fitting Instructions



Made to Measure Window Blinds

Intu® Duette® Shades

Screwfit Fitting Instructions

This Duette® Shades was custom built to your exact requirements. High Quality materials and a design that is perfect in function and elegance guarantee a lifetime of long service.

Please read the following instructions carefully before installing your blinds

IMPORTANT: by screwing into your UPVC window frame you may be invalidating your warranty, please check with your window supplier before proceeding.

Intu® Duette® Shades


Screwfit Fitting Instructions




1. Fitting tools required include star point screwdriver, scissors, drill & Ø2.5mm drill bit.




5. With the drill at 90° to the surface, drill Ø2.5mm hole 1 off on each side.

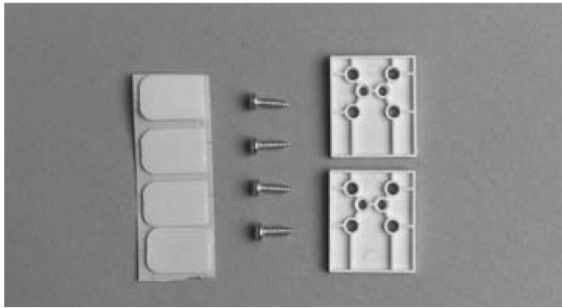


2. Accessories pack (packing pieces as required).

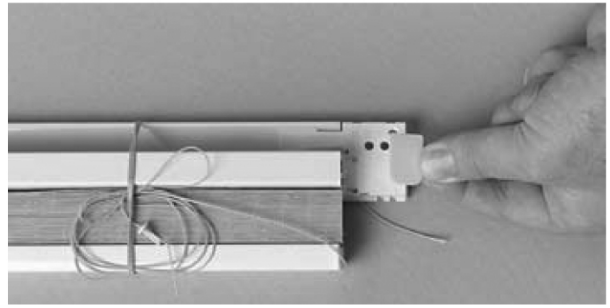

6. Attach double sided adhesive pad.

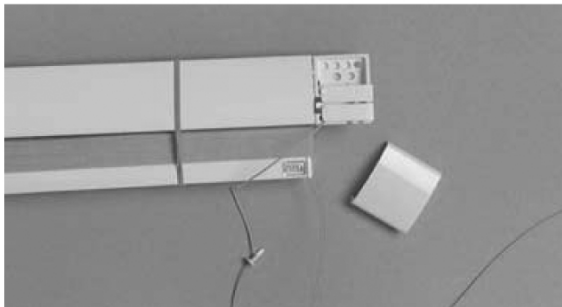

3. Unclip trimcap on both sides

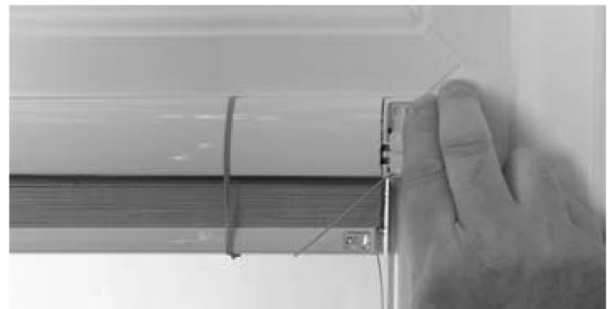

7. Stick blind onto frame leaving rubber band around blind.



4. Using blind, mark positions for the cord grommet holes



8. Drill Ø2.5mm holes 2 off on each side

Intu® Duette® Shades

Screwfit Fitting Instructions



9. Hand screw fixings.



13. Press locking gate closed to secure cord. Cut-off excess cord leaving 100mm min. Tuck through hole in endcap.



10. Push cord knot into hole, push fixing grommet into hole, aligning groove to cord.



14. Clip on trimcaps.



11. Holding button, pull cord tight to secure.



15. If optional handle is required to be fitted, attach handle using pre-drilled holes and screws provided.



12. Remove rubber band. Carefully release locking gate. Pull cord to tension approx. Equal on both sides.

Intu® Duette® Shades

Screwfit Fitting Instructions



Fitting Blind to Timber Frames



A1. Fitting tools required include Ø4mm drill bit and star point screwdriver.



A3. Screw in brass inserts until flush with timber surface.



A2. Mark position as outlined in step 4 (over leaf). Drill Ø4mm hole to depth of 10mm.



A4. Push cord knot into brass insert, push grommet into brass insert, aligning groove to cord.

Continue as for PVC frames from step 11