

Intu® Venetian & Duette® Shades
Beadfit Fitting Instructions



Made to Measure Window Blinds

Intu® Venetian & Duette® Shades

Beadfit
Fitting Instructions


This blind was custom built to your exact requirements.
High Quality materials and a design that is perfect in function
and elegance guarantee a lifetime of long service.

Intu® Venetian & Duette® Shades


Beadfit Fitting Instructions




1. Fitting tools required include scissors and Bracket Insertion Tool (INTU/INSERTTOOL)

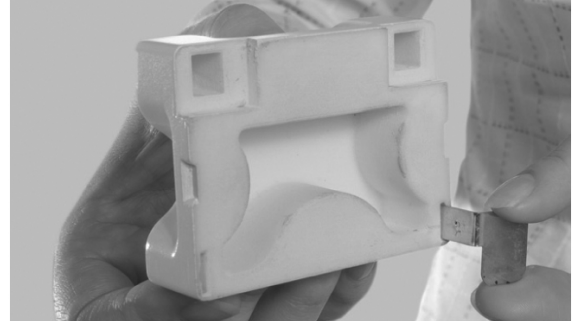


5. Position bottom fixing bracket into the purpose made slot in the Bracket Insertion Tool.

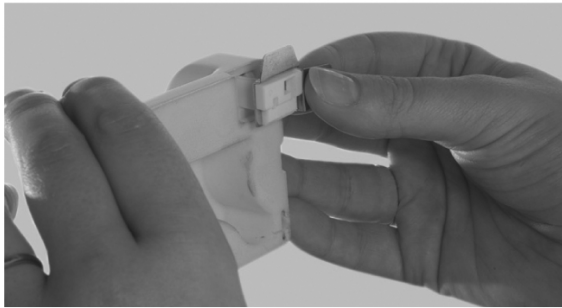

2. Position top fixing bracket into the purpose made slot in the Bracket Insertion Tool.

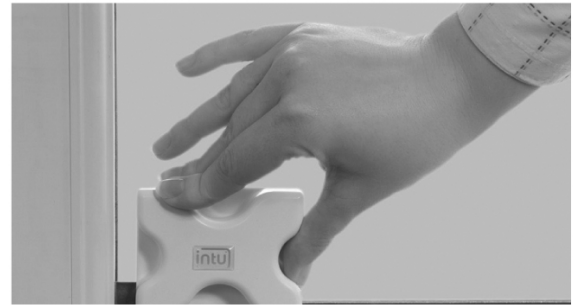

6. Position bracket behind rubber bead and carefully push the metal leg behind the bead.

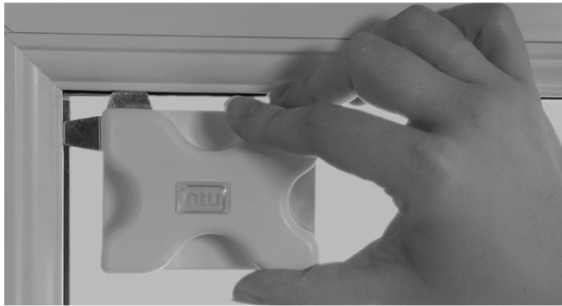

3. Position bracket behind rubber bead and carefully push the metal legs behind the bead.



7. Check bracket is vertically secured. Repeat both sides.




4. Check bracket is squarely secured. Repeat both sides.




8. Place the side profile* against the side frame with flat face towards the glass and the notch to the bottom.

Intu® Venetian & Duette® Shades

Beadfit Fitting Instructions

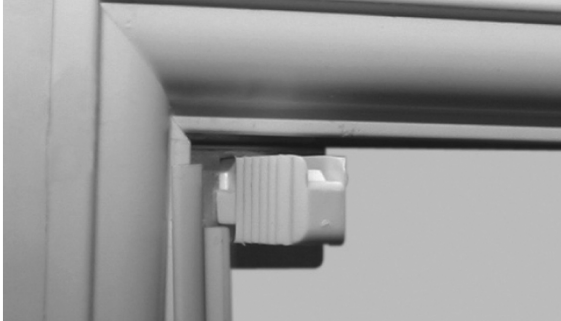


9. Slide the top edge into the slot of the bracket. Push profile fully into position.

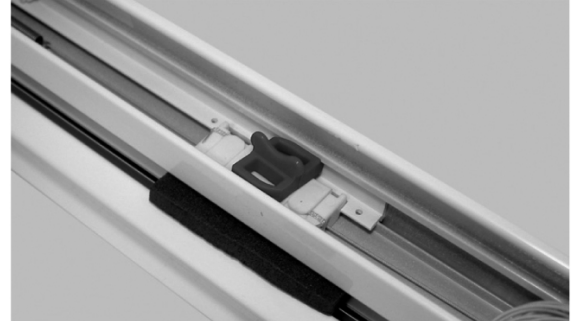

13. Remove transit packing piece by rotating clockwise (Venetian blinds only).




10. Slide bottom slot of profile over the bottom bracket. Repeat both sides.

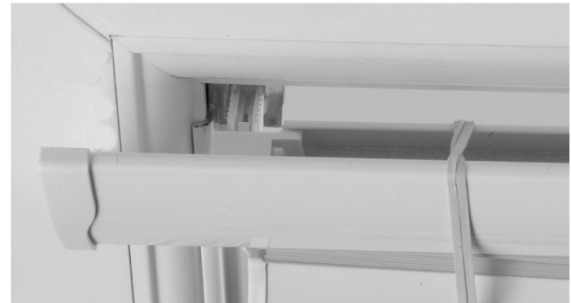

14. With rubber bands in place, align the headrail end cap slot with bracket arms.



11. At the appropriate position(s) on each side profile, fit retention clips (long side profiles only).

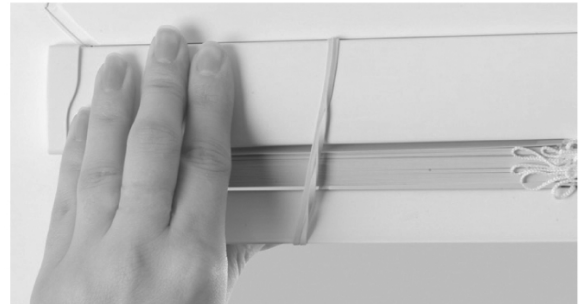

15. Ensure headrail is correctly aligned and firmly press home.



12. Press home using the insertion tool. Fully located the clip will sit over the side profile.




16. Snip off the rubber bands and carefully lower the slats to the bottom frame.

Intu® Venetian & Duette® Shades

Beadfit Fitting Instructions



17. With cord at bottom of bracket, slide onto clip. Repeat both sides.

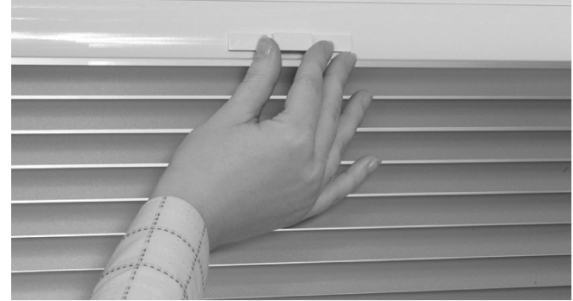

19. Check the blind operation, raise/lower and open/close is satisfactory.




18. To align the bottomrail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords. Align bottomrail to the horizontal.

INTU® Duette® Shades

The steps required to fit INTU® Duette® Shades are the same as for INTU® Venetian up to step 16. From step 17 on, follow the instructions below



17. With cord at bottom of bracket, slide onto clip. Repeat both sides.

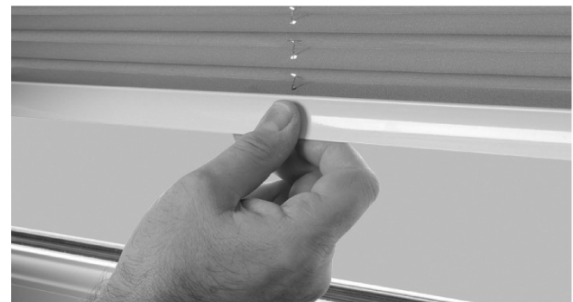

18. To align the bottomrail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords. Check the blind operation, raise/lower is satisfactory.