



Made to Measure Window Blinds

Intu® Venetian Blinds

Screwfit Fitting Instructions

This Venetian blind was custom built to your exact requirements.
High Quality materials and a design that is perfect in function
and elegance guarantee a lifetime of long service.

Please read the following instructions carefully before installing your blinds

IMPORTANT: by screwing into your UPVC window frame you may be invalidating your warranty, please check with your window supplier before proceeding.

Intu® Venetian Blinds


Screwfit Fitting Instructions




1. Fitting tools required include star point screwdriver, scissors, drill & Ø2.5mm drill bit.




5. With the drill at 90° to the surface, drill Ø2.5mm hole 1 off on each side.

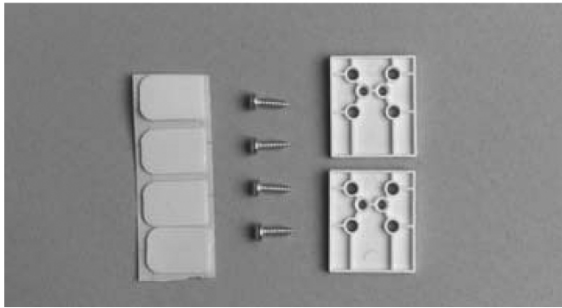

2. Accessories pack (packing pieces as required).

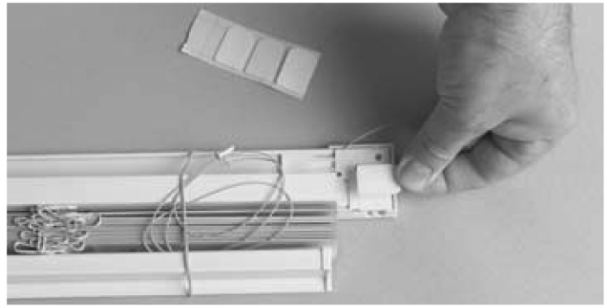

6. Attach double sided adhesive pad.

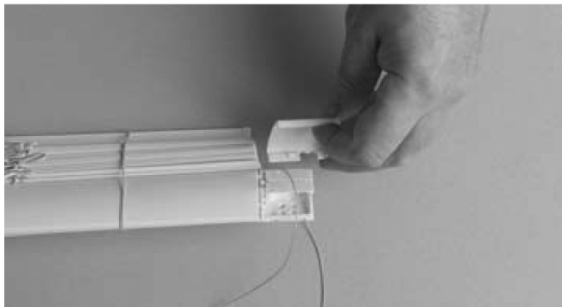

3. Unclip trimcap on both sides.



7. Stick blind onto frame leaving rubber band around blind.



4. Using blind, mark positions for the cord grommet holes.



8. Drill Ø2.5mm holes 2 off on each side.

Intu® Venetian Blinds

Screwfit Fitting Instructions




9. Hand screw fixings.



13. Press locking gate closed to secure cord




10. Push cord knot into hole, push fixing grommet into hole, aligning groove to cord

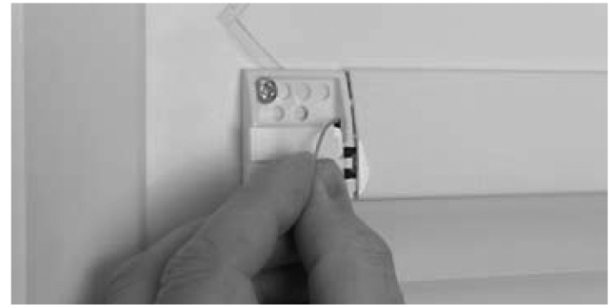

14. Cut-off excess cord leaving 100mm min. Tuck through hole in endcap



11. Holding button, pull cord tight to secure

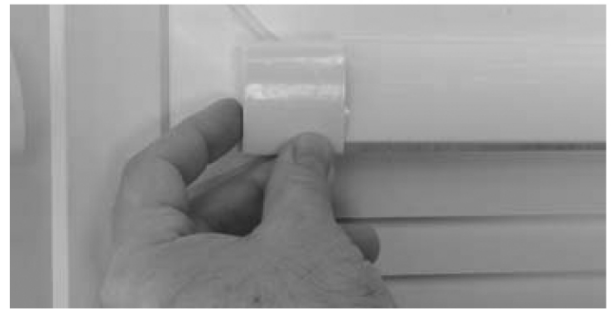

15. Clip on trimcaps.



12. Remove rubber band. Carefully release locking gate. Pull cord to tension approx. equal on both sides

Intu[®] Venetian Blinds

Screwfit Fitting Instructions



Fitting Blind to Timber Frames



A1. Fitting tools required include Ø4mm drill bit, star point screwdriver.



A2. Mark position as outlined in step 4 (over leaf). Drill Ø4mm hole to depth of 10mm.



A3. Screw in brass inserts until flush with timber surface



A4. Push cord knot into brass insert, push grommet into brass insert, aligning groove to cord.



B2. Remove pulley cover, lightly tension lift cords down window side, mark position to fix pulley.



B3. Drill Ø2.5mm hole 1 off.



B4. Hand screw fixing




B5. Refit pulley cover.



B6. Test tilt operation

INTU Venetian Blind with Side Tilt Control

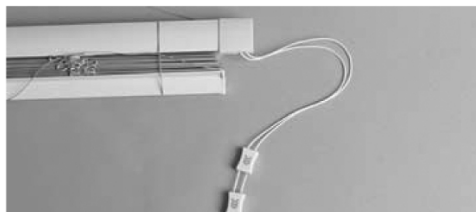

B1. Blind as supplied with side tilt control.