
Senses Vertical Inside Recess Top Fix



Fitting Instructions

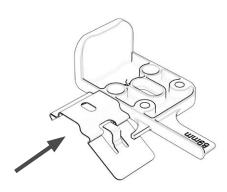

For top fix, the above image shows how the bracket is attached.

Step 1. But the fitting tool against recess front face. If the fitting tool does not but flat against the recess front face, then 89mm vanes will not fit within the recess.

Step 2. Position first bracket approximately 60mm from either end of the recess. Mark the location of the bracket with pen/pencil.

Step 3. Position the remaining bracket(s) spread evenly across the length of the blind. For bracket quantities, see table on next page

Step 4. Using a suitably sized drill bit, drill all marked positions (use wall plugs where appropriate).


Step 5. Position the fitting tool on the recess front face, and line up the bracket with the drilled hole.

Step 6. Screw bracket in to place and remove the fitting tool. Repeat process for remaining brackets.

Step 7. For both Senses & Nexus, engage the front of the rail into the bracket like the image above.

Step 8. To secure, snap the rail into the bracket. To disconnect, push the tab at the back of the bracket and remove rail.

PLEASE NOTE: Always use cord tensioning devices or suitable child safety devices with open chain or cord loops.

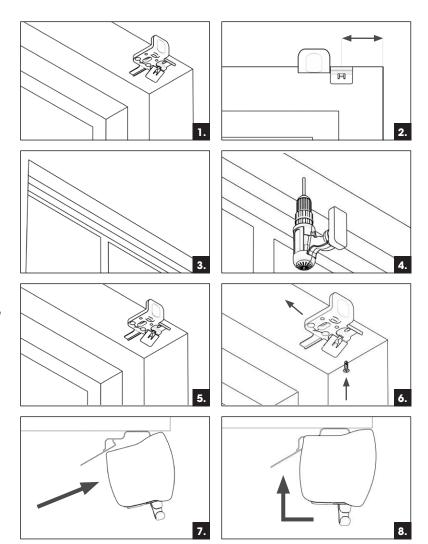

| SENSES WIDE - BRACKET QUANTITIES | |
|----------------------------------|--------------------------|
| Width | No. of Brackets Required |
| < 1350mm | 2 |
| 1350mm to 2099mm | 3 |
| 2100mm to 3299mm | 4 |
| 3300mm to 3999mm | 5 |
| 4000mm to 5000mm | 6 |

| SENSES SLIM - BRACKET QUANTITIES | |
|----------------------------------|--------------------------|
| Width | No. of Brackets Required |
| < 1350mm | 2 |
| 1350mm to 2099mm | 3 |
| 2100mm to 3299mm | 4 |
| 3300mm to 4000mm | 5 |